

DIY BACKYARD SPRAY FEATURE

SUPPLIES:



- ♦20 feet - 3/4" PVC Pipe
- ♦3 - End Caps
- ♦2 - T Connections
- ♦2 - 90 Degree Elbows
- ♦1 Pack quarter circle mister jets (12)
- ♦1 Female Threaded Hose Connector

TOOLS:

- ♦PVC Pipe Cutter or Hand Saw
 - ♦PVC Cement
 - ♦Drill
 - ♦Pencil
 - ♦Ruler/Tape Measure
- ❖To add additional features, reduce 1 end cap, add 1 threaded male hose connector, 1 hose cap and additional PVC pipe

DIRECTIONS:

- ♦Purchase two, 10 foot pieces of PVC pipe.
 - ♦Cut side pieces into two - 5 foot sections
 - ♦Cut top piece to be 4 feet in length
 - ♦Cut 4 base legs, 18 inches in length
- Drill 5/32 inch mister holes in top/side pieces. 10 inch intervals for a 12 pack.
 - ♦All the misters should point in the same direction. Start out by marking a center line on the 3 longest pieces of pipe. Hold 2 pieces of pipe next to one another and use one as a guide to mark the other. Drill holes should be at 10 inch intervals.
- Fit the drilled PVC together to form a "U" shape with all the drilled holes facing up.
- Twist the misters into the holes; push hard to snap in then turn. Align it so the last turn faces inwards.
- Now that the "U" is glued and misters installed, we need a base. Check the fit and glue them up.
 - The default setup, for one spray feature.
 - The option to support multiple features.
- Attach the base insuring it's straight.

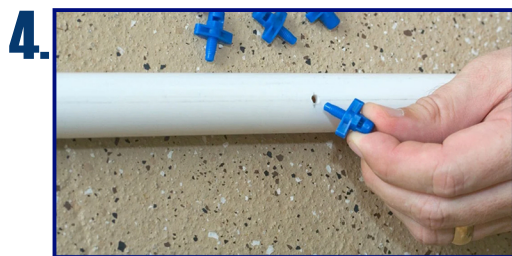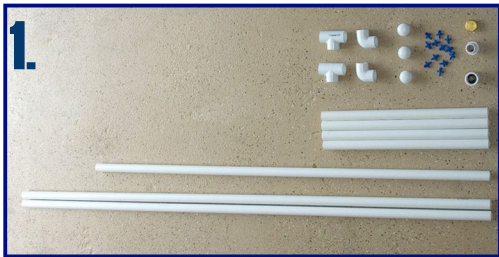

NOW TRY IT OUT!

<Credit: Instructables.com "kidwash">